


# Culligan®

*Culligan®  
Aqua-Clear®  
Good Water  
Machine™  
Drinking Water  
System  
Owners Guide*



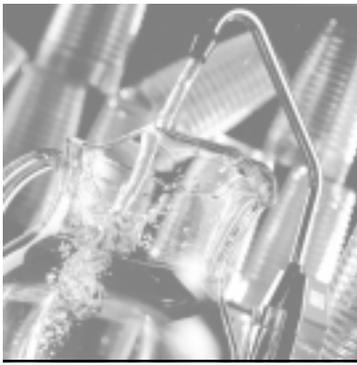

**NOTICE: Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system. Systems certified for cyst reduction may be used on disinfected water that may contain filterable cysts.**

Check with your public works department for applicable local plumbing and sanitation codes. Follow your local codes if they differ from the standards used in this manual.


Operational, maintenance and replacement requirements are essential for this product to perform properly. The Aqua-Clear® Good Water Machine™ contains replaceable particulate and activated carbon filters. It also includes a replaceable reverse osmosis membrane filter which is critical for the effective reduction of Total Dissolved Solids. The filtered water should be tested periodically to verify that the system is performing properly.

CULLIGAN INTERNATIONAL COMPANY  
One Culligan Parkway  
Northbrook, Illinois USA 60062-6209  
847/205-6000  
[www.culligan.com](http://www.culligan.com)

# Table of Contents

---

Safety/Warnings .....	i
System Specifications .....	2
Introduction	
About Your System .....	3
Component Description.....	3
How to Use Your System .....	5
Performance Check .....	5
Installation	
Application Guidelines .....	6
Servicing Your System	
Service Schedule .....	8
Filter Replacement.....	8
Parts List.....	13
Service Log .....	14
Warranty .....	17

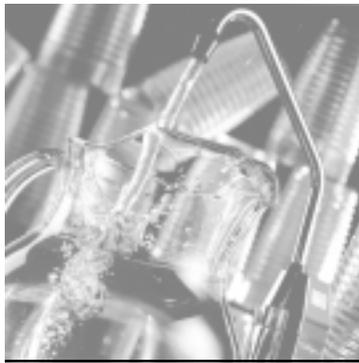

## System Specifications

System Flow Sequence .....	Partical Filter (H-30 PRV Only), ..... Activated Carbon Filter, ..... Reverse Osmosis Membrane Filter, Storage Tank, ..... Polishing Filter, Dispensing Faucet
Activated Carbon Filter .....	Solid Carbon Block
Reverse Osmosis Membrane Filter .....	Culligan® Aqua-Clear® Thin Film Composite
System Daily Production Rate to Pressurized Storage Tank .....	9.6 gpd (36.3L) (3 gallon)
Product Production Rate without storage tank to atmosphere <sup>1</sup> - H-30 S-R Models .....	30 gpd (114 L/day)
Ratio of Product to Flush Flow <sup>2</sup> Soft Water Applications .....	2:3 <sup>3</sup>
Hard Water Applications .....	1:3 - 1:5
Polishing Filter .....	Cullar G Activated Carbon
Dispensing Faucet .....	Culligan Aqua-Clear Faucet Rotary Operation, Stainless Steel and Resin Flow Passages, with Built-in Siphon Break
Colors .....	Polished Chrome or White
Storage Capacity Tank .....	3 gallons
Dimensions - Filter Assembly .....	7"W x 4.3"D x 16.3"H
- Storage Tank .....	11" Diameter x 15"H

<sup>1</sup> Rating at 50 psi, 77°F, 500 mg/L TDS Influent, Without Storage Tank to atmosphere. This is a factory specification for membrane production. Actual production rate and TDS rejection will depend on temperature, water pressure, TDS level, membrane variation and usage pattern.

<sup>2</sup> May vary with pressure. See Technical Manual for all hard water applications and applications where TDS exceeds 1000 mg/L (ppm).

<sup>3</sup> Except nitrate models.

# Introduction

---

Thank you for choosing a Culligan® Aqua-Clear® Good Water Machine™ drinking water system. Your new system is designed to bring you years of healthful, deliciously crystal-clear Culligan® water. With its special faucet installed on your sink, it's like getting bottled water straight from your kitchen tap.

With three separate filter technologies and its unique space-saving design, the Aqua-Clear Good Water Machine is the most advanced drinking water system available today from Culligan.

## **ABOUT YOUR SYSTEM**

The reverse osmosis method of water treatment has long been regarded as one of the most efficient and effective ways to reduce impurities. It's the technology we've used to build your new Culligan Aqua-Clear Good Water Machine. In addition, we've incorporated activated carbon and fine particle filtration to bring you one of the most effective systems available today.

## **AQUA-CLEAR GOOD WATER MACHINE SYSTEM COMPONENTS**

Refer to Figure 1, page 7

### Particle Filter

The particle filter screens out dirt, sand, rust, and other microscopic particles 15 times smaller than a grain of sand.

### Activated Carbon Filter


The activated carbon filter gets rid of bad tastes and odors, including chlorine. If present in your untreated water supply.

### Reverse Osmosis Membrane Filter

The reverse osmosis (RO) membrane filter squeezes out dissolved substances, including radium, lead and many others. These substances may not be in your water. See Performance Data Sheet for list of substances and removal percentages.

### Manifold Assembly

The manifold serves as the functional hub of the system, directing and regulating the flow through each of the system's components. It makes the Good Water Machine extremely space efficient and simplifies filter changes.

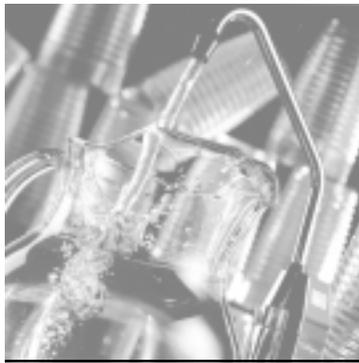

## Introduction (cont'd)

---

### Polishing Filter

The Aqua-Clear® Good Water Machine™ includes a second activated carbon filter as added assurance that your water will be crystal clear.

### Faucet

The special drinking water faucet mounts conveniently on your kitchen sink. A simple twist of the handle is all it takes to enjoy refreshing Culligan drinking water.

---

## HOW TO USE YOUR SYSTEM

With the Aqua-Clear® Good Water Machine™, you'll get a continuous supply of clear, refreshing water for drinking and cooking. But Culligan improves a lot more than just water. Crystal clear Culligan® water is ideal for:

- coffee
- tea
- soup
- juice
- everything you make with water
- recipes
- baby formula
- houseplants
- pets
- pasta
- ice cubes
- steam irons
- drink mixes


## PERFORMANCE CHECK

This system contains a replaceable treatment component, critical for the effective reduction of Total Dissolved Solids, and that product water shall be tested periodically to verify that the system is performing properly.

To check the performance of your Aqua-Clear Good Water Machine, it is necessary to measure the total dissolved solids (TDS) level of the filtered water. This simple test can be done quickly by your dealer.

The Good Water Sentry™ Water Quality Monitor is another way to keep track of your system's performance. This optional accessory checks your drinking water each time you use the special faucet, and signals when the membrane filter may need to be replaced.

If the water quality of your system seems to have declined, drain the storage tank and allow the system to refill. If the problem persists, call your Culligan Man for service.

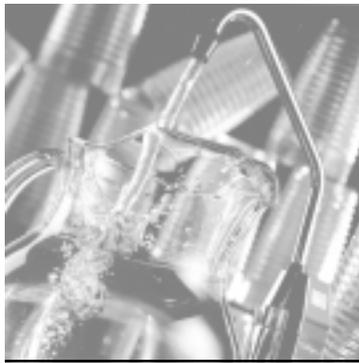

## Installation

This Owner's Guide provides visual assembly reference only. Since specialized skills are required in the assembly of the drinking water system, we recommend that you contact your local independently operated Culligan dealer to complete this installation.

Please refer to the *Aqua-Clear/Good Water Machine Drinking Water Systems Technical Manual (01-8819-46)* for installation guidelines on the following topics:

- Faucet Installation
- Flushing Procedure for Pre-Filters
- Storage Tank Settings
- Post Installation Performance Measurements

### APPLICATION GUIDELINES


The Aqua-Clear® Good Water Machine™ is designed for use on potable water supplies meeting the guidelines outlined in Table 1. The system should be installed on your home's cold water line. The flushing stream should discharge through an approved siphon break as illustrated in Figure 1. Installation of this system must comply with state and local laws and regulations.

The Good Water Machine may also be used to provide crystal-clear Culligan water to other drinking water using appliances such as an icemaker or refrigerator. Installing the unit to supply filtered water to other appliances may be complicated and require additional components for proper use. We again recommend that you contact your local independently operated Culligan dealer to complete this type of installation. Use of the Good Water Machine with these and other appliances must follow the guidelines set forth in the *Aqua-Clear/Good Water Machine Drinking Water Systems Technical Manual (01-8819-46)*. Installations that do not follow these guidelines run the risk of working improperly or even causing damage to the appliances.

**TABLE 1**


Influent Water Characteristic	
Pressure	40 - 120 psi (280 - 827 kPa)
Temperature	33 - 100°F (1 - 38°C)
Total Dissolved Solids (TDS) <sup>1</sup>	0 - 2500 ppm ( 0 - 2500 mg/L)
pH	5 - 10
Chlorine <sup>2</sup>	0 - 3 ppm ( 0 - 3 mg/L)
Chloramine	0 - 3 ppm ( 0 - 3 mg/L)
Turbidity	0 - 10 NTU
Hardness <sup>3</sup>	0 - 20 gpg
Iron	0 - 1 ppm (0 - 1 mg/L)
Bacterial Quality	Potable

- 1 See the Technical Manual for all applications where TDS exceeds 1000 ppm (1000 mg/L). A booster pump is strongly recommended.
- 2 The reverse osmosis membrane filter used in this system may be damaged by chlorine. This system includes activated carbon which protects this element by reducing chlorine. Influent chlorine should not exceed 3 mg/L.
- 3 A softener is strongly recommended for water over 10 gpg.

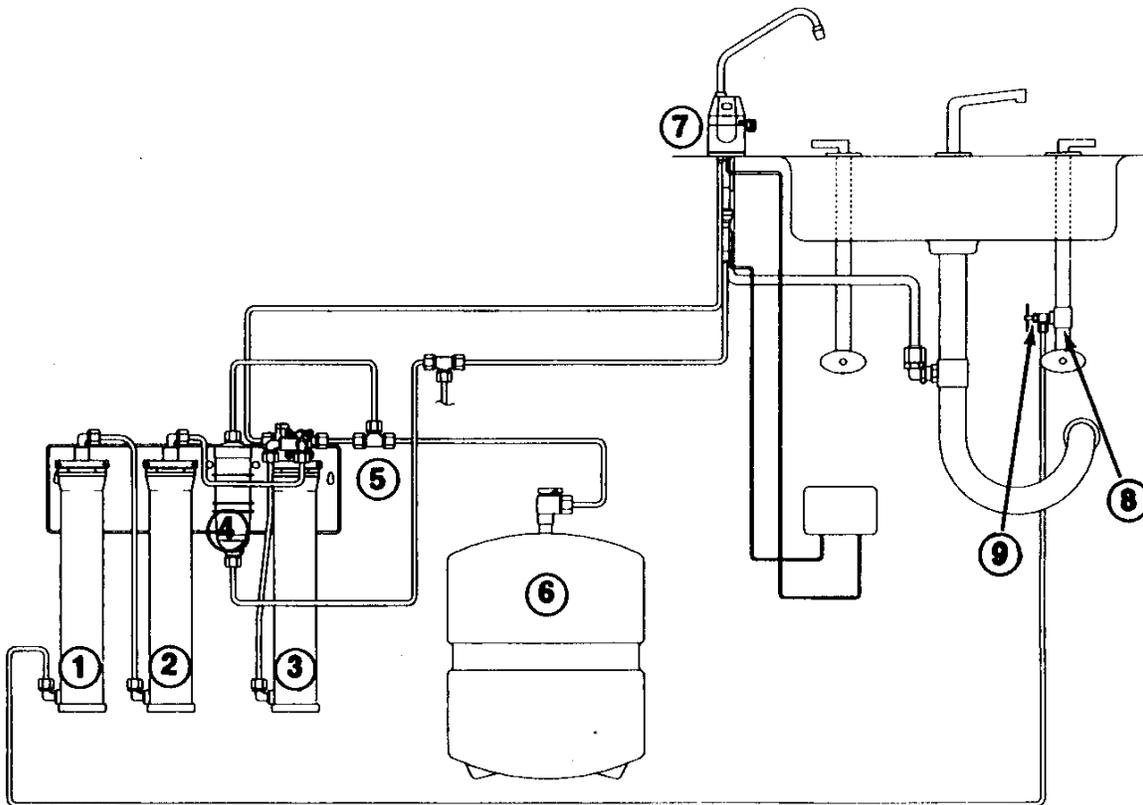

1. Particle Filter\*
2. Activated Carbon Filter\*
3. Reverse Osmosis Membrane Filter
4. Polishing Filter
5. Tubing Tee
6. Storage Tank
7. Faucet
8. Cold Water Line
9. Water Shutoff

\* Combined Particulate/Activated Carbon Filter on Model H-30S-R

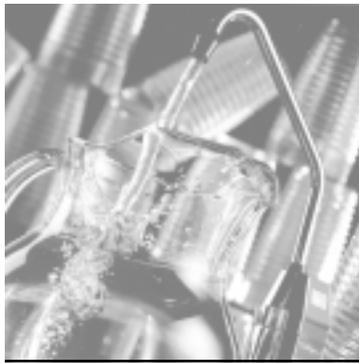

## Servicing Your System

### **SERVICE SCHEDULE**

When properly maintained, your Aqua-Clear® Good Water Machine™ will give you years of dependable service. Use the following as a guide to get the most out of your system. Service frequency may vary depending on your local water conditions. High sediment, chlorine, turbidity, or hardness levels may require more frequent service. Refer to Figures 3 & 4.

#### At Least Once Per Year

##### Replace:

- Particle Filter (1)
- Activated Carbon Filter (2)
- Polishing Filter (4)

##### Check:

- RO Membrane Filter (3)
  - TDS Reduction Performance
  - Flow Rates
- Capillary Assembly

#### Sanitize the System.

Use the convenient chart inside the back cover of this booklet to keep track of your system's maintenance.

### **FILTER REPLACEMENT**

Culligan recommends that you have your Aqua-Clear Good Water Machine serviced by your local Culligan Man. You can rely on his or her experience and expertise to keep your system in top operating condition.

If you wish to service your system, the filters are available from your Culligan dealer. For replacement components, please contact your local Culligan Dealer or 1-847-205-6000 for the dealer near you. See the Parts List at the end of this section for replacement numbers.


### **Cartridge Conditioning**

The activated carbon, reverse osmosis, and polishing filter cartridges must be conditioned as follows prior to installation into the Good Water Machine. Your Culligan Man can do these important procedures at the time of purchase.

Activated Carbon Cartridge - 2 gallon flush to remove carbon dust

RO Membrane Filter - minimum 6 hour flush to remove preservative solution

Polishing Filter - 2 gallon flush to remove carbon dust.



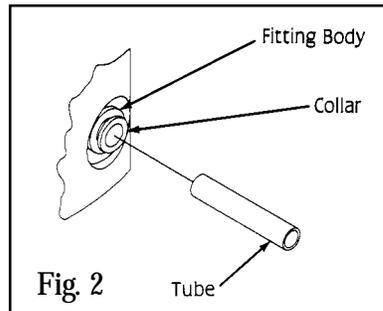



## Tubing Connectors

The Aqua-Clear® Good Water Machine™ features easy-to-use push-in tubing connectors (Fig. 2) on the manifold assembly and the polishing filter.

To disconnect the connector, hold the collar against the fitting body and pull the tube from the fitting.

To assemble lubricate the tubing end with water and push the tubing into the connector until it bottoms out. Be sure the tubing is smooth and free of abrasions, otherwise a leak may result.

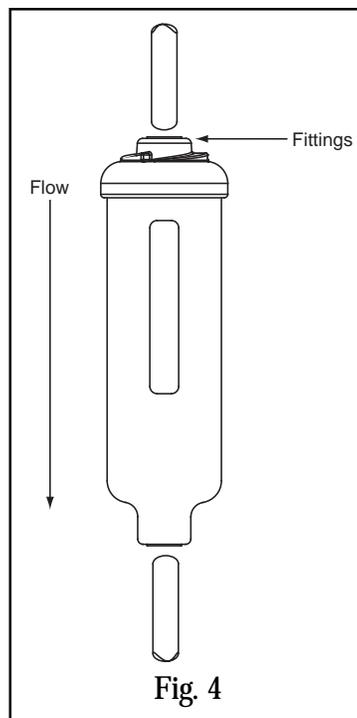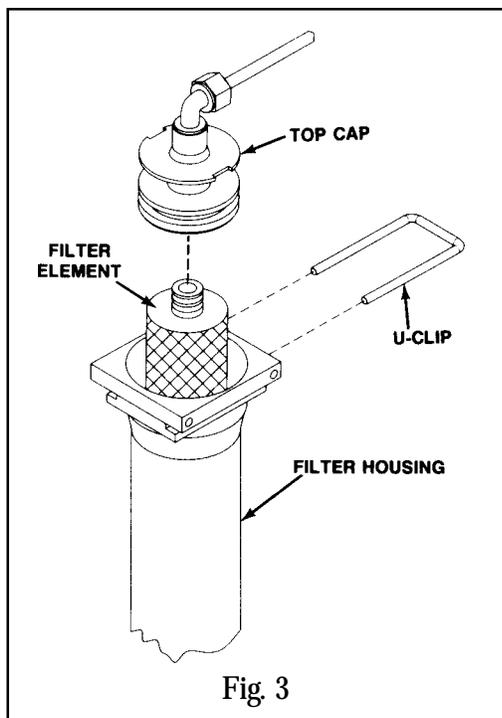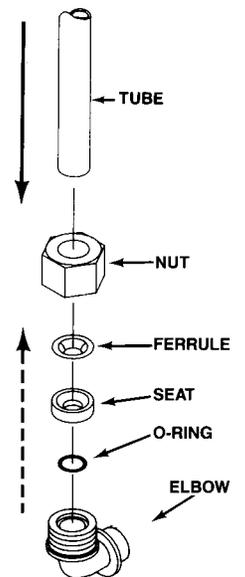

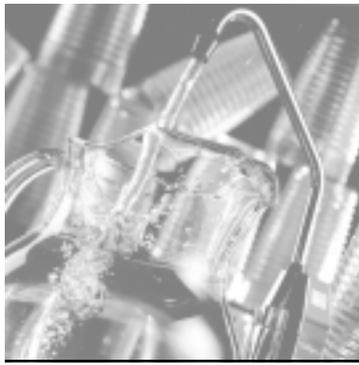

## Servicing Your System (cont'd)

### Filter Replacement and Sanitizing Procedure

Use the following procedure and the reference in Fig. 3 when servicing the Aqua-Clear® Good Water Machine™.

*NOTICE: Cleanliness is essential in the filter replacement procedure. Be sure to wash your hands thoroughly before handling filters. The use of protective gloves is strongly recommended.*

#### Materials:

- Pre-flushed activated carbon cartridge and polishing filter cartridge
- Particle filter
- Household (5.25%) bleach - hydrogen peroxide is not recommended
- Clean 1-gallon plastic container with cap
- 100-ml graduated cylinder
- Plastic pan to hold manifold assembly
- Tubing connector, 3/8" tube x 3/8" tube
- Flat-blade and #2 Phillips screwdrivers
- Paper towels
- Disposable plastic gloves (like those used in the food service industry)

#### PREPARATION

1. Locate the system's supply valve and turn off the system's water supply.
2. Using the graduated cylinder, add 5 ml (about 1 teaspoon) of bleach to the 1-gallon container. Open the dispenser faucet and fill with one gallon of product water. If there is not enough RO water, fill the container the rest of the way with soft water. Cap the container and shake to mix.

*NOTICE: If any RO water remains after filling the container, you may want to fill a pitcher with the drinking water as it will take several hours for the system to refill after servicing. In any case, leave the faucet open until the storage tank is empty and then, close the faucet.*

3. Remove the polishing filter (Fig. 4) and discard. Connect the tubing ends together with the tubing connector.
4. Lift the filter assembly from the mounting bracket and place it in the plastic pan to catch any dripping water.
5. Using the flat-blade screwdriver, pull the u-clips from all three housings. Insert the u-clip into the two square holes at the bottom rear of the manifold and push up to release the filter housings. Remove the housings with a downward twisting pull.
6. Remove the particle filter cartridge and the activated carbon cartridge and discard. If the RO membrane filter will be reused, clean the outside with a wet paper towel and place the membrane filter in a clean, unused plastic bag.
7. Wet some paper towels with the diluted bleach solution. Clean the inside of the housings and the underside of the manifold with the paper towels.

---

## SANITIZING THE STORAGE TANK AND FAUCET

1. Add 15 ml (about one tablespoon) of bleach to the particle filter housing (#1, Fig. 3). Replace all three housings on the manifold and insert the u-clips.
2. Turn on the supply valve and fill the storage tank with 1 to 2 gallons of water.  
NOTICE: *The weight of the storage tank will increase by 8 to 16 pounds.* Turn off the water supply valve.
3. Wait ten minutes before opening the faucet and draining the storage tank. Do not rinse any remaining solution from the tank.

NOTICE: *During this time, proceed to the “Sanitizing the Manifold Assembly” section. Wait to do step 4 until indicated.*

4. Remove the temporary tubing connector and replace it with a new polishing filter. Make sure the flow arrow on the polishing filter points to the faucet (Fig. 4).

## SANITIZING THE MANIFOLD ASSEMBLY

1. Using the flat-blade screwdriver, pull the u-clips from all three housings. Insert the u-clip into the two square holes at the bottom rear of the manifold and push up to release the filter housings. Remove the housings with a downward twisting pull. Discard any solution remaining in the housings.
2. Open the particle filter cartridge bag half way, being careful not to touch the filter element. Lubricate the particle filter cartridge o-rings with water and insert the cartridge into position #1 in the manifold.
3. Fill housing #1 about 2/3 full of the diluted bleach solution from the 1-gallon container. Assemble the housing to the manifold and replace the u-clip.
4. Repeat steps 2 and 3 for housing #2 (activated carbon cartridge) and housing #3 (RO membrane filter).

NOTICE: *For RO membrane filters that have a single open-end, pour diluted bleach solution into the center tube.*


---

**⚠ CAUTION: The solution should remain in contact with the RO membrane filter for at least five (5) but no longer than ten (10) minutes. Longer contact time will shorten the life of the membrane.**

---

NOTICE: *While waiting for the filters to be sanitized, complete step 4 of the “Sanitizing the Storage Tank and Faucet” section. Then complete step 5 below.*

5. Using the #2 Phillips screwdriver, loosen the capillary assembly retaining screws, then twist and remove the assembly. Inspect the tubing for plugging and kinks and replace the tubing as needed. Reinstall the capillary assembly, but leave the screws ¼-turn loose.

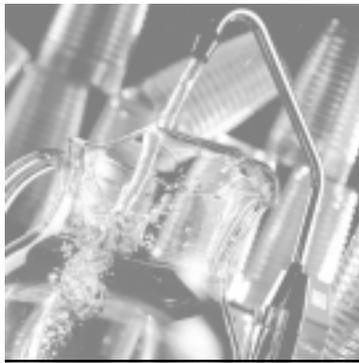

## Servicing Your System (cont'd)


---

6. *In this step, you will need to observe water flowing to the drain. If the drain flow is not visible with the current tubing connections, install a temporary drain tube in the waste port of the manifold.* Turn on the supply valve. When water is seen flowing to the drain, carefully loosen the capillary tube assembly retaining screws until the flow to the drain increases.

*NOTICE: When the assembly is about 3/16" out of the manifold, the o-ring seal for the capillary tube is bypassed, but there should be no external leaks.*

7. Rinse the manifold assembly for five minutes or until no chlorine is detected in the water passing to the drain. Tighten the capillary assembly retaining screws.
8. Check the performance of the system according to the procedure outlined in the "Performance and Technical Information" section of this manual. Replace the RO membrane if necessary.
9. Instruct the customer to discard the first glassful of water from the system to flush out any residual chlorine that might remain in the polishing filter tubing and faucet. The polishing filter will remove any chlorine remaining in the storage tank.
10. Record your service on the chart at the end of the Owner's Guide.

# Parts List

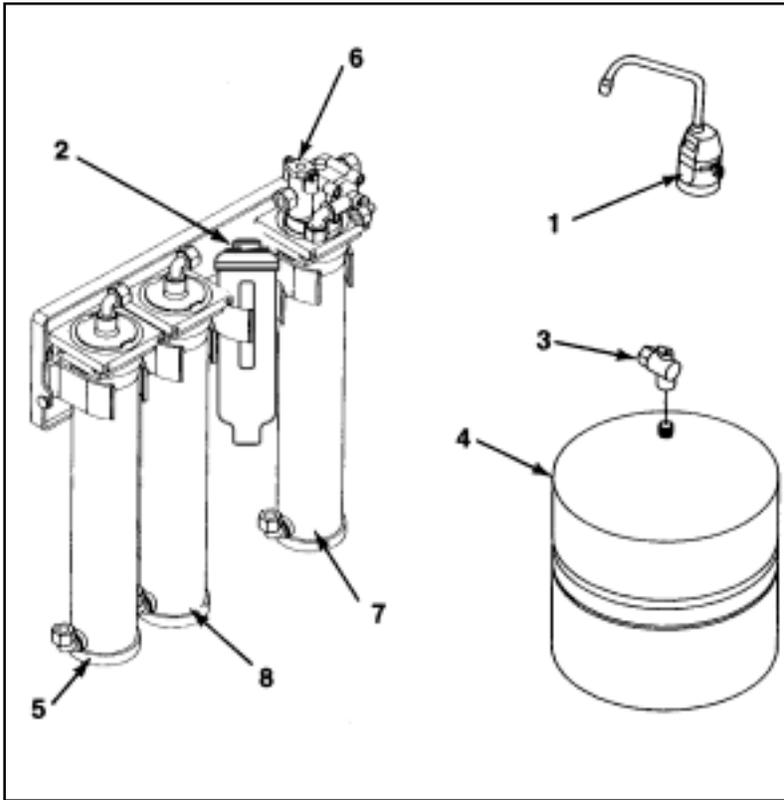

Item	Description	Part Number
1	Faucet - Chrome - White	01-0004-42 01-0022-53
2	Polishing Filter	00-4028-07
3	Plastic Ball Valve	01-0027-85
4	Storage Tank - Std. - Medium - Large	01-0050-95 01-0047-76 01-0047-65
5	Activated Carbon Element	01-0125-80
6	Capillary Assembly	01-0090-27
7	Reverse Osmosis Membrane Element H-30	01-0074-02
8	Activated Carbon Element	01-0125-80
*	Icemaker Tee - 1/4 x 1/4 x 1/4	01-0024-66
*	Tubing, Blue - 1/4" O.D.	00-4021-84
*	Good Water Sentry™ Monitor	01-0039-45
*	Aqua-Clear® Booster Pump	01-0093-34

\* Not Illustrated



# Performance Data Sheet

*IMPORTANT NOTICE: Read this Performance Data Sheet and compare the capabilities of the unit with your actual water treatment needs. Culligan recommends that you have your water supply tested to determine these needs before purchasing a water treatment unit.*

Culligan knows the more informed you are about your water treatment systems, the more confident you will be about its performance. It's because of this and more than sixty years of commitment to customer satisfaction that Culligan is providing this Performance Data Sheet to its customers.

**MANUFACTURER:** Culligan International Company,  
One Culligan Parkway, Northbrook, IL 60062-6209 USA  
(847) 205-6000

**PRODUCT:** Culligan® Aqua-Clear® Good Water Machine™ Reverse Osmosis Drinking Water System  
**MODELS:** H-30 SR, H-30 PRV-C

## USE GUIDELINES

- Working Pressure: 40-120 psig (280-827 kPa)
- Do not allow exposure to temperatures below 33°F (1°C)
- Maximum operating temperature: 100°F (38°C)
- This system must be installed according to local plumbing codes on the cold water line.
- This system requires regular replacement of all filters to maintain proper operation. Depending on usage and influent water quality, the carbon and particulate filters should be changed at least annually and the reverse osmosis membrane should be replaced every 3-5 years. Verifying chlorine, sediment or TDS levels may effect replacement frequency.
- Particulate Prefilter Element ..... 00-4015-38
- Activated Carbon Prefilter Element ..... 01-0125-80
- Activated Carbon Postfilter Element ..... 00-4028-07
- Reverse Osmosis Module ..... 01-0074-02
- If water production decreases or a noticeable taste change occurs, contact your local Culligan Dealer. A Culligan professional can determine if your drinking water system requires servicing. Optional water quality monitors are also available to monitor the performance of the reverse osmosis membrane.
- **CAUTION: Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system. Systems certified for cyst reduction may be used on disinfected water that may contain filterable cysts. EPA Est 2938-IL-01.**
- The Good Water Sentry™ Water Quality Monitor is another way to keep track of your systems performance. This optional accessory checks your drinking water each time you use the special faucet, and signals when the membrane filter may need to be replaced.


## SUGGESTED INSTALLATION EQUIPMENT

### Sink Cutting Tools

Porcelain Cutter Kit, 1-1/4 inch diameter, PN 00-5916-25  
Greenlee Hole Punch, 1-1/4 inch diameter  
Plumbers Putty  
Heavy Duty Drill with speed control to 400 rpm

### Tools

Screwdriver, blade and Phillips (#1)  
1/8 inch diameter pilot drill for #10 screws  
Center Punch  
Razor Blade Knife  
Faucet Installation Tool, PN 00-4033-75  
Aqua-Clear® H Series or "System" series filter housing

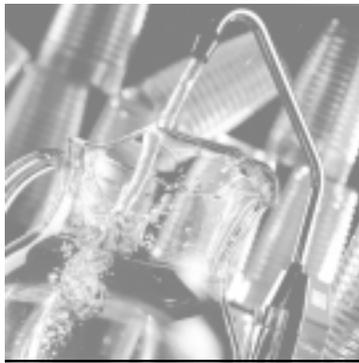

**TESTING CONDITIONS (Complete Systems)**

**Temperature:** 77°F ± 2°F      **pH:** 7.5 ± 0.5  
**Pressure:** 50 psi      **Turbidity:** < 1 NTU

This system has been tested and shown to operate at its calculated recovery rating under standard test conditions.

**DIMENSIONS**

**Filter Assembly**      7.5" W x 3" D x 16.5" H (20 cm W x 8 cm D x 42 cm H)  
**Storage Tank** - Standard      11" Diameter x 15" H (28 cm Diameter x 38 cm H)

Refer to your **Installation and Operating Instructions** and printed limited Warranties for more specific product information. To avoid contamination from improper handling and installation, your system should only be installed and serviced by your Culligan Man. *Performance will vary based on local water conditions. The substances reduced by this system are not necessarily in your water.*

Culligan water softeners are designed to work with any salt of good quality, although it is recommended that you ask your local independent Culligan dealer. *Performance will vary depending on local water conditions. The substances reduced by this system are not necessarily in your water.*

**APPLICATION GUIDELINES**

The Good Water Machine™ is designed for use on potable water supplies meeting the guidelines outlined in Table 1. The system should be installed on your home's cold water line. The flushing stream should discharge through an approved siphon break as illustrated in Figure 1. Installation of this system must comply with state and local laws and regulations.

**TABLE 1**

Influent Water Characteristic	
Pressure	40 - 120 psi (280 - 827 kPa)
Temperature	33 - 100°F (1 - 38°C)
Total Dissolved Solids (TDS) <sup>1</sup>	0 - 4000 ppm (0 - 4000 mg/L)
pH	5 - 10
Chlorine <sup>2</sup>	0 - 3 ppm (0 - 3 mg/L)
Chloramine	0 - 3 ppm (0 - 3 mg/L)
Turbidity	0 - 10 NTU
Hardness	0 - 20 gpg
Iron	0 - 1 ppm (0 - 1 mg/L)
Bacterial Quality	Potable

- 1 See the Technical Manual for all applications where TDS exceeds 1000 ppm (1000 mg/L). A booster pump is strongly recommended.
- 2 The reverse osmosis membrane filter used in this system may be damaged by chlorine. This system includes activated carbon which protects this element by reducing chlorine. Influent chlorine should not exceed 3 mg/L.
- 3 A softener is strongly recommended for water over 10 gpg.

# Culligan Limited Warranty

## **CULLIGAN® AQUA-CLEER® GOOD WATER MACHINE™ H-30S-R and H-30 PRV-C MODEL SERIES**

You have just purchased one of the finest drinking water systems made. As an expression of our confidence in Culligan products, your drinking water system is warranted to the original end-user, when installed in accordance with Culligan International Company specifications, against defects in material and workmanship from the date of original installation, as follows:

**For a period of FIVE YEARS      The entire reverse osmosis water conditioning unit, EXCLUDING THE EXPENDABLE FILTER CARTRIDGES AND REVERSE OSMOSIS MEMBRANE FILTER USED IN THE UNIT.**

**For a period of ONE YEAR      The Culligan brand reverse osmosis membrane filter.**

If a part described above is found defective within the specified period, you should notify your independently operated Culligan dealer and arrange a time during normal business hours for the dealer to inspect the drinking water system on your premises. Any part found defective within the terms of this warranty will be repaired or replaced by the dealer. You pay only freight from our factory and local dealer charges.

Damage caused by accident, fire, flood, freezing, Act of God, misuse, misapplication, neglect, alteration, installation or operation contrary to our printed instructions, or by the use of accessories or components which do not meet Culligan specifications, is not covered by this warranty.

Our product performance specifications are furnished with each drinking water system. TO THE EXTENT PERMITTED BY LAW, CULLIGAN DISCLAIMS ALL IMPLIED WARRANTIES INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE; TO THE EXTENT REQUIRED BY LAW, ANY SUCH IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE ONE-YEAR PERIOD SPECIFIED ABOVE FOR THE PARTS DESCRIBED IN THIS LIMITED WARRANTY. As manufacturer, we do not know the characteristics of your water supply or the purpose for which you are purchasing a drinking water system. Please understand that the quality of water supplies may vary seasonally or over a period of time, and that your water usage rate may vary as well. Water characteristics can also change considerably if your drinking water system is moved to a new location. For these reasons, we assume no liability for the determination of the proper equipment necessary to meet your requirements, and we do not authorize others to assume such obligations for us. Further, we assume no liability and extend no warranties, express or implied, for the use of this product on a non-potable water source. OUR OBLIGATIONS UNDER THIS WARRANTY ARE LIMITED TO THE REPAIR OR REPLACEMENT OF THE FAILED PARTS OF THE DRINKING WATER SYSTEM, AND WE ASSUME NO LIABILITY WHATSOEVER FOR DIRECT, INCIDENTAL, CONSEQUENTIAL, SPECIAL, GENERAL, OR OTHER DAMAGES, WHETHER FROM CORROSION OR OTHER CAUSES.

### CONSUMERS:

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Similarly, some states do not allow the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Consult your telephone directory for your local independently-operated Culligan dealer, or write Culligan International Company, for warranty and service information.

**CULLIGAN INTERNATIONAL COMPANY  
One Culligan Parkway  
Northbrook, Illinois 60062**